

Mini-CMoy Pocket Amp


Assembly Information

(RS 276-0150 version)


Detailed instructions online at <http://tangentsoft.net/audio/cmoy-tutorial/>

All drawings 2:1 scale


1. Halve protoboard; add jumpers:

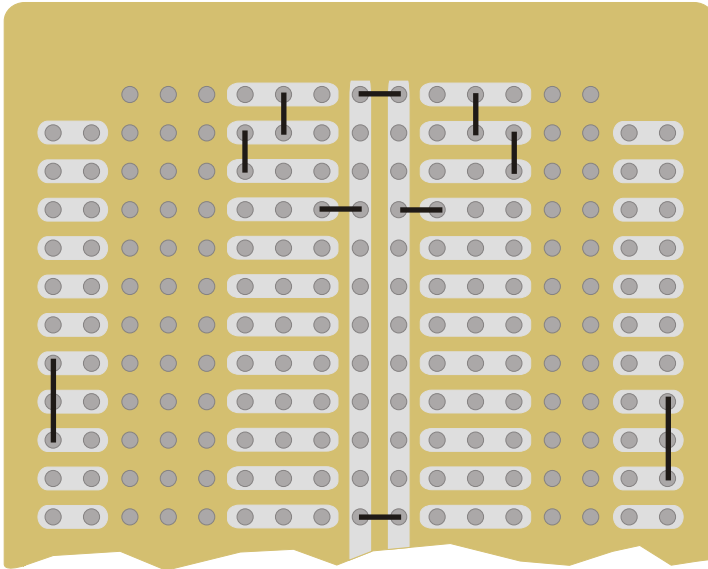

2. Add power supply:

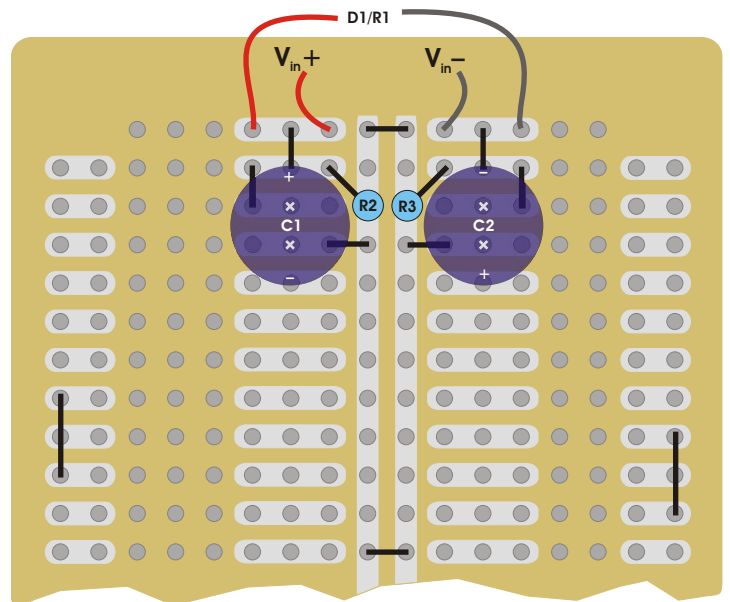

3. Add amplifier section (don't confuse C1 and R1-3 with the parts in the power supply section with the same name):

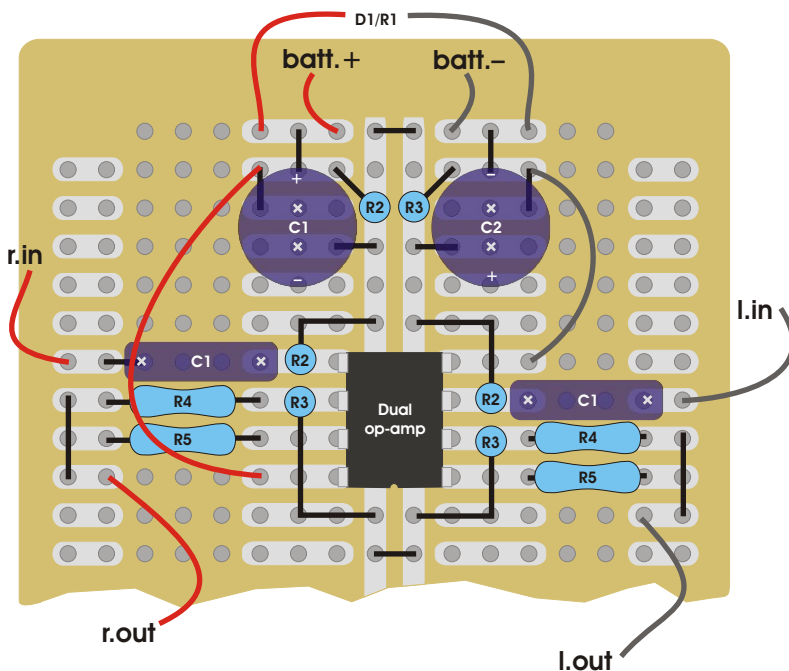

4. Add panel components,enclose, and enjoy!

